

T100 and Q155 medium pressure diaphragm upgrade and secondary containment system.

The T100 & Q155 Medium Pressure diaphragms and hydraulic components have been upgraded to greatly improve reliability of the pump. The upgrade makes numerous improvements to the pump including:

- Improved diaphragm sealing under high suction pressure conditions, including for stationary pumps under high suction pressures.
- Addition of the secondary containment system that prevents excess process fluid loss in the event of a diaphragm failure by isolating the hydraulic end from the fluid end under high suction pressure conditions.

The new diaphragm is only compatible with the new hydraulic components, so customers performing a diaphragm upgrade change will need to upgrade their hydraulic components at the same time. For ordering convenience, Wanner has created an upgrade kit that contains all the components needed for a full upgrade. The part number of the Upgrade Kit is 177-919, 177-920 & 209-919, 209-920.

Installation of the Upgrade Kit is achieved as detailed below.

1. Ensure you have on hand the T100 or Q155 Series Medium Pressure O & M Manual.
2. Drain oil from the pump.
3. Remove pump manifold (not pictured, see O & M manual).
4. Remove old diaphragms (not pictured, see O & M manual).
5. Remove spool valve.
6. Insert the bias rod (8), bias spring (9), and reused bias tube cap (not pictured). Fasten bias tube cap using Loctite 242 and torque to 50 ft.-lbs. (135 N-m).
7. Reinsert the spool valve (not pictured, see O & M manual).
8. Fasten the diaphragm clamp (13) to the bias rod using the diaphragm clamp screw (14). Fasten using Loctite 242 and torque to 20 ft.-lbs (27 N-m). Use care not to over-tighten as that can cause the rod to rotate and bind the bias spring. Verify the bias spring is not bound by pulling the diaphragm clamp out and verifying that the clamp has full range of motion.
9. Place screw head plug (15) onto diaphragm clamp screw.



Wanner Engineering, Inc

1204 Chestnut Avenue Minneapolis,
MN 55403 USA

Phone: 612-332-5681

Fax: 612-332-6937

Toll-Free Fax (USA): 800-332-6812

Email: sales@wannereng.com

www.hydra-cell.com



Wanner International Ltd

8 & 9, Fleet Business Park
Sandy Lane, Church Crookham
Hampshire GU52 8BF, England P

Phone: +(44) 01252 816847

Fax: +(44) 01252 629242

Email: sales@wannerint.com

www.hydra-cell.co.uk



Wanner Pumps Ltd

Flat A, 21/F, Chatham Commercial building
399 Chatham Road North

Hunghom, Kowloon, Hong Kong

Phone: +(852) 3428-6534

Fax: +(852) 3188-9145

Email:
sales@wannerpumps.com

www.wannerpumps.com

10. Place the diaphragm (4) into the diaphragm plate with the back-up ring (5). Make sure screw head plug is in place when inserting diaphragm.
11. Place two O-rings (2) into the follower (3).
12. Place the follower into the diaphragm (4).
13. Tighten the follower to the diaphragm clamp using two follower screws (1). Apply Loctite and tighten to 80 in.-lbs. (9 N-m).
14. Reattach the pump manifold (not pictured). The manifold should slide cleanly onto the pump, and the back-up rings should be engaged into the mating grooves in the manifold prior to tightening. Failure to slide the manifold fully back so that the back-up rings and mating grooves engage (prior to tightening) can pinch the back-up rings and cause the pump to leak. If the manifold does not slide easily onto the pump, use "Scotch-Brite" or fine abrasive paper to clean the outer edge of the grooves where the back-up rings fit.
15. Fill the pump with oil.
16. Attach diaphragm kit name plate (16) to existing hole on top of diaphragm plate with provided screw (17).

Available parts kits:

Kit part No.	Pump	Material
177-920	T100	HNBR (BUNA-N).
209-920	Q155	
177-919	T100	FKM (VITON).
209-919	Q155	

 Wanner Engineering, Inc

1204 Chestnut Avenue Minneapolis,
MN 55403 USA
Phone: 612-332-5681
Fax: 612-332-6937
Toll-Free Fax (USA): 800-332-6812
Email: sales@wannereng.com
www.hydra-cell.com

 Wanner International Ltd

8 & 9, Fleet Business Park
Sandy Lane, Church Crookham
Hampshire GU52 8BF, England P
Phone: +(44) 01252 816847
Fax: +(44) 01252 629242
Email: sales@wannerint.com
www.hydra-cell.co.uk

 Wanner Pumps Ltd

Flat A, 21/F, Chatham Commercial building
399 Chatham Road North
Hung Hom, Kowloon, Hong Kong
Phone: +(852) 3428-6534
Fax: +(852) 3188-9145
Email: sales@wannerpumps.com
www.wannerpumps.com

Parts kits contents:

Item No.	Part Number	Description	T100	Q155
			177- QTY	209- QTY
1	177-176-01	Screw, M6, FHSS	6	10
2	100-217-__	O-ring	6	10
3	177-193-01	Follower, 316 SST	3	5
4	177-188-__	Diaphragm	3	5
5	177-167	Ring, Back-Up	3	5
6	177-149	Screw, M8, OHMS	3	5
7	177-312	Guide, Spring	3	5
8	177-194	Rod, Bias	3	5
9	177-195	Spring, Bias	3	5
10	177-050	Screw, M5	6	10
11	177-192	Arm, Valve	3	5
12	177-169	Support Ring	3	5
13	177-168	Clamp, Diaphragm	3	5
14	177-359	Screw, M8	3	5
15	177-642	Plug, Screw Head	3	5
16	177-191	Name Plate, Diaphragm Kit	1	1
17	177-180	Screw, M10	1	1



Wanner Engineering, Inc

1204 Chestnut Avenue Minneapolis,
 MN 55403 USA

Phone: 612-332-5681

Fax: 612-332-6937

Toll-Free Fax (USA): 800-332-6812

Email: sales@wannereng.com

www.hydra-cell.com



Wanner International Ltd

8 & 9, Fleet Business Park
 Sandy Lane, Church Crookham
 Hampshire GU52 8BF, England P

Phone: +(44) 01252 816847

Fax: +(44) 01252 629242

Email: sales@wannerint.com

www.hydra-cell.co.uk



Wanner Pumps Ltd


Flat A, 21/F, Chatham Commercial building
 399 Chatham Road North
 Hunghom, Kowloon, Hong Kong

Phone: +(852) 3428-6534

Fax: +(852) 3188-9145

Email:
 sales@wannerpumps.com

www.wannerpumps.com

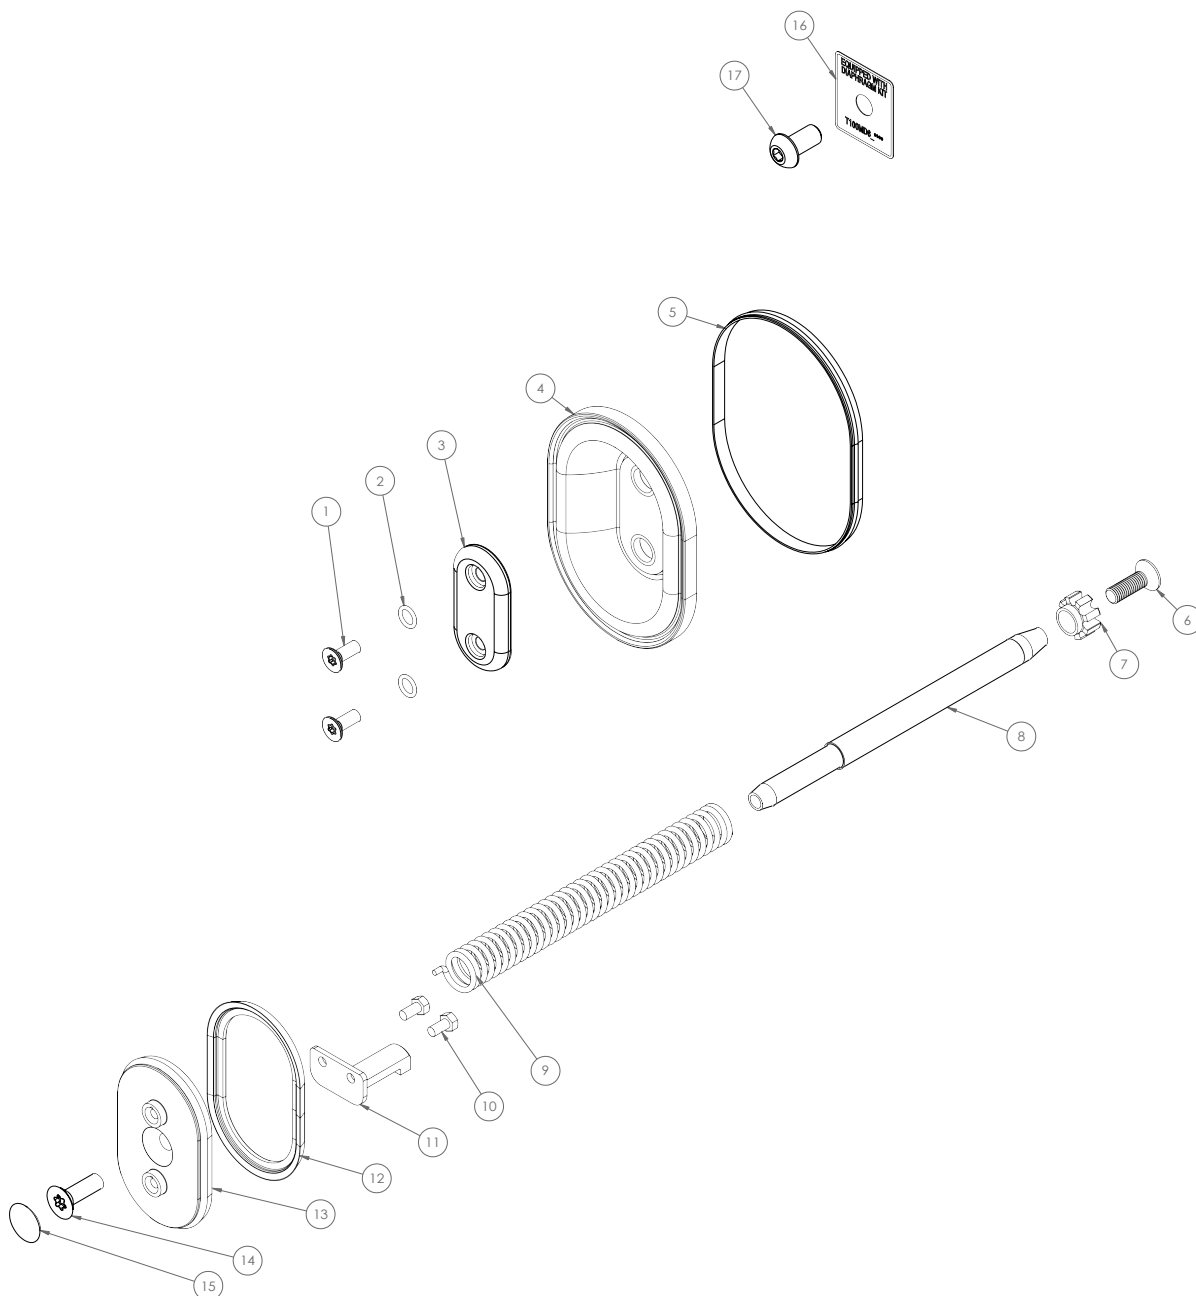

Wanner Engineering, Inc

1204 Chestnut Avenue Minneapolis,
 MN 55403 USA

Phone: 612-332-5681

Fax: 612-332-6937

Toll-Free Fax (USA): 800-332-6812

Email: sales@wannereng.com

www.hydra-cell.com



Wanner International Ltd

8 & 9, Fleet Business Park
 Sandy Lane, Church Crookham
 Hampshire GU52 8BF, England P

Phone: +(44) 01252 816847

Fax: +(44) 01252 629242

Email: sales@wannerint.com

www.hydra-cell.co.uk



Wanner Pumps Ltd

Flat A, 21/F, Chatham Commercial building
 399 Chatham Road North
 Hunghom, Kowloon, Hong Kong

Phone: +(852) 3428-6534

Fax: +(852) 3188-9145

Email: sales@wannerpumps.com

www.wannerpumps.com